



To use the Computer / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. If the computer is not displaying through the projector by default, go to the Computer1 input channel by pressing the Computer button on the projector remote.

To use the Document Camera / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. Turn on the Document Camera by pressing the large power button located on the front section of the document camera.
3. Use the Computer button located on the projector remote to switch the projector to the Computer2 input channel.