



To use the Computer / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. Ensure that the Extron VGA Switcher is set to channel 1.
3. If the computer is not displaying through the projector by default, go to the Computer1 input channel by pressing the Computer button on the projector remote.

To use the Document Camera / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. Turn on the Document Camera by pressing the power button on the document camera remote.
3. Use the Computer button located on the projector remote to switch the projector to the Computer2 input channel.
4. Ensure that the Extron VGA Switcher is set to channel 1.

To use the Auxiliary VGA (laptop)

1. Turn on the projector using the red power button located on the projector remote.
2. Hook your device to the VGA cable.
3. Ensure that the Extron VGA Switcher is set to channel 2.
4. If the computer is not displaying through the projector(s) by default, go to the Computer1 input channel by pressing the Computer button on the projector remote.