



To use the Computer / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. If the computer is not displaying through the projector by default, switch to the Computer1 input channel by pressing the Computer button on the projector remote.

To use the VCR / Projector

1. Turn on the projector using the red power button located on the projector remote.
2. Turn on the VCR.
3. Press the Video button on the projector remote control to switch to the VIDEO input channel.